


Script to generate testcases



AGENDA


- ❑. Overview
- ❑. Background
- ❑. Input file
- ❑. Python script
 - ❑ Functions
- ❑. Running the script
- ❑. DEMO

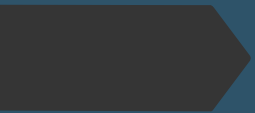








OVERVIEW

- ❑ Script for test generation helps reduce time in creating multiple testcases
- ❑ Doesn't require too much attention to the register specifics of design
- ❑ Makes the process of testcase generation less mechanical
- ❑ Python was used as it provides a lot of packages to make it programmer friendly

BACKGROUND

- ❑ The test case is divided into sections that need to be/ can be modified for a particular testcase. These sections are stored in separate text files.
- ❑ The input parameters of the testcase are given through a csv file which has the following format.
- ❑ The first column has the parameter names.
- ❑ The following columns represent the values of the parameters for each train.
- ❑ Each of the subsequent columns represent a train.
- ❑ The script is written in python 3.7 and uses a package “pandas” which is required to be installed to run either on Windows or Linux
- ❑ Note: This does not use regular expressions but just string operations for text manipulation



Name	Date modified	Type	Size
 __pycache__	10/23/2018 11:33 ...	File folder	
 inputs.csv	10/23/2018 12:07 ...	Microsoft Excel C...	1 KB
 stdig_test_gen.py	10/24/2018 2:59 PM	Python File	20 KB
 arb.txt	10/23/2018 12:07 ...	TXT File	5 KB
 e_off_trim.txt	10/23/2018 12:07 ...	TXT File	1 KB
 rot_map.txt	10/23/2018 12:07 ...	TXT File	1 KB
 sti_map.txt	10/23/2018 12:07 ...	TXT File	1 KB
 template.txt	10/23/2018 12:07 ...	TXT File	6 KB
 trvn.txt	10/23/2018 12:07 ...	TXT File	3 KB

INPUT FILE

- ☐ It is recommended to use Microsoft Excel or Libre Calc for ease in providing inputs
- ☐ The parameters here corresponds to the most commonly used parameters that are provided in the stim_dig spec document.
- ☐ More parameters can be added as per your requirement.
- ☐ However the function that enables assignment in the testcase needs to be added in the script
- ☐ The particular parameters can explained during the demo

INPUT FILE

	A	B
1		tr_1
2	e0_sti	a0
3	e1_sti	
4	e2_sti	a7
5	e3_sti	
6	e4_ret	a1
7	e5_ret	
8	e6_ret	a3
9	e7_ret	
10	e0_rot	a1
11	e1_rot	a7
12	e2_rot	b3
13	e3_rot	a4
14	matching	1
15	pulse_type	3
16	rot_num	3
17	rot_ca	0
18	csw_gnd	0
19	csw_ret	1
20	on_dur	\$urandom
21	off_dur	\$urandom
22	ramp_dur	1
23	tslice_dur	1
24	secg_ext_dur	1
25	glbl_ext_dur	1
26	ramp_stp	3
27	ru_en	1
28	rd_en	1
29	glbl_ext_en	1
30	secg_ext_en	1
31	ap_bl	0
32	frc_bl_en	0
33	nf_bl	1
34	pbl_ext_en	1
35	ecap_bl_ext	\$urandom
36	tr_intrvl	800
37	sti_amp	\$urandom
38	pulse_stim_c	\$urandom_range(1,30)
39	frc_bl_ext_dt	1
40	ecap_bl_ext	\$urandom_range(1,63)
41	ip_dly	\$urandom_range(1,31)
42	acbl_ratio	1
43	n_pulse	4
44	pulse_dur	\$urandom_range(1,63)
45	hi_res	\$urandom
46	tr_mode	0
47	active_tr	1
48	priority_tr	0

PYTHON SCRIPT

- ❑ The script reads and stores data from 6 TEXT files, each is a section of the SV test code
- ❑ Functions are defined to read values from the CSV file and manipulate them to write to the register
 - ❑ For example, Consider Train1 config reg 0

Table-276: Train 1 configuration control register 0

Register: trv1_cfg_0 Address: 070			
Bit	Type	Reset Value (hex)	Description
7:4	RES	0	Reserved
3:2	C	0	current config setting 00 = normal matching 01 = high matching 10 = reserved 11 = reserved
1:0	C	0	train type setting 00 = pulse 01 = pulse group 10 = arbitrary 11 = rotating electrodes

EXAMPLE FUNCTIONS

- ❑ This function defined in the script reads the value from the csv file and performs bit manipulation to program the register as shown below
- ❑ Here the function ifrandom checks if the parameter is random in the input file and generates a random value within the limits if true.

```
def trv_cfg_0():  
    matching = ifrandom('matching',0,3)  
    pulse_type = ifrandom('pulse_type',0,3)|  
    val = ((matching<<2) | pulse_type)  
    val =format(val,'02X')  
    val ='8\h'+val  
    return val
```

```
/*          CONFIG          */  
    register_prog(trv1_cfg_0_addr,8'h07);
```

EXAMPLE FUNCTIONS

- ❑ Another function that is important and can be used in functions for other registers is the `get_value` function, which retrieves the value from the csv file.
- ❑ This can be used to add more parameters in the future

```
def get_value(parameter):  
    if os.path.exists(filename):  
        with open(filename, 'r') as csvfile :  
            df = pd.read_csv(csvfile, index_col =0)  
            try:  
                val = df['tr_1'][parameter]  
            except:  
                print("Error in reading| "+parameter)  
                raise  
    else:  
        print("path does not exist")  
        return  
    if (val== None):  
        return 0  
    else:  
        return val
```

```
def trv_on_dur():  
    on_dur = get_value('on_dur')  
    if (on_dur.find('$urandom') == -1):  
        val =int(on_dur)  
        val = format(val, '02X')  
        val = '8\'h'+val  
        return(val)  
    else:  
        return on_dur
```

RUNNING THE SCRIPT

- ❑ Currently the script allows the specification of the testname, path where the test is to be stored, number of trains, the input csv file.
- ❑ Provisions will be made to randomize a particular parameter based on the testcase
- ❑ Currently the script is incapable of generating testcases that have more than one train, this should be implemented soon.
- ❑ Therefore, sequential, interleave and multi train modes are done manually for now
- ❑ The command looks as follows in the linux environment
- ❑ `$ python stdig_test_gen.py -option input`
- ❑ Any other suggestions are welcome